

COMPONENT LOCATIONS

AUXILIARY FAN

Page-Figure

Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Top of LH front wheel well, in relay box	201-2
Fuse Box	LH rear corner of engine compartment	100-1
Receiver Drier Temperature Switch	On receiver drier, behind RH headlights	202-1
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ GLOVE BOX LIGHT/ENGINE OVERLOAD PROTECTION

Fuse Box	LH rear corner of engine compartment	100-1
Intake Manifold Pressure Switch	Top of intake manifold	
Kickdown Solenoid	RH front of transmission	202-2
Kickdown Switch	Under accelerator pedal	
Overload Protection Valve ...	Rear center of engine compartment	
Starter Lockout/Backup Light Switch	LH side of transmission	204-1
C104 (14 pins)	Under LH side of instrument panel	207-1

(Chart continued on next page)

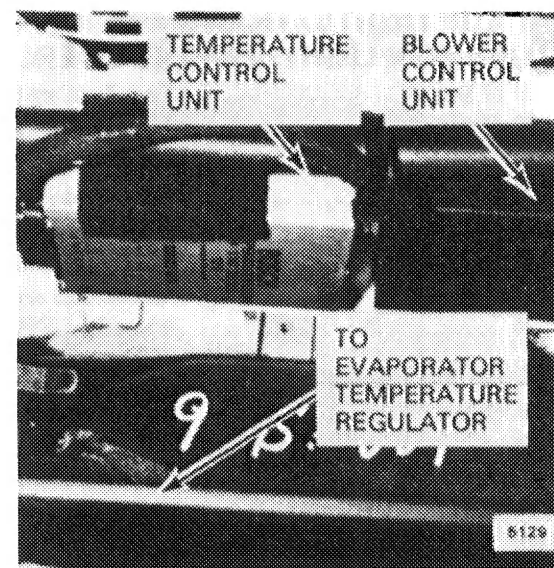


Figure 1 - Behind Glove Box (TD only)

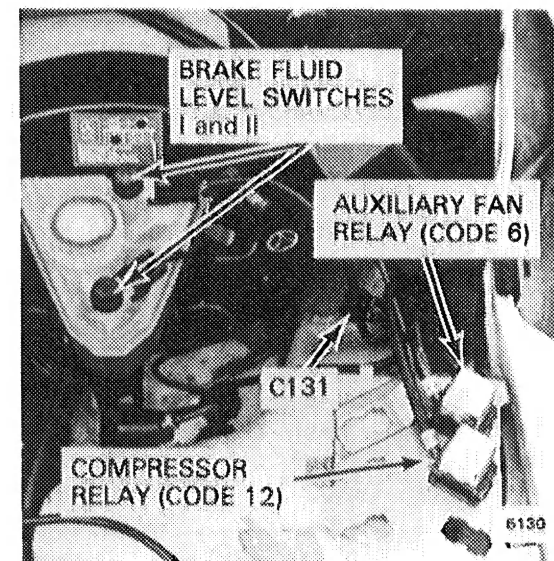


Figure 2 - Behind LH Front Wheel Well

COMPONENT LOCATIONS

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ GLOVE BOX LIGHT/ENGINE OVERLOAD PROTECTION (continued)

		Page-Figure
C138 (4 pins).....	To left of spare tire	209-1
C139 (4 pins).....	Ahead of RH rear light assembly	207-2
C153 (6 pins).....	LH front wheel well	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

Fuse Box	LH rear corner of engine compartment	100-1
Hazard Warning Switch/ Flasher	On center console	
C124 (1 pin).....	Behind center console	
G102	Behind instrument cluster	210-2
G109	In console, base of gear shift selector	

CHARGING SYSTEM

Alternator	Front of engine	
Battery	RH rear of engine compartment	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
G100	RH front fender, ahead of battery	

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay		
(300 D/CD)	Behind LH rear wheel well.....	203-2
(300 TD)	To left of spare tire	209-1
Antenna Switch	On upper console	
Fuse Box	LH rear corner of engine compartment	100-1
C135 (6 pins)		
(300 D/CD)	Behind LH rear wheel well	
(300 TD)	To left of spare tire	209-1
C148 (2 pins).....	Behind upper console	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1

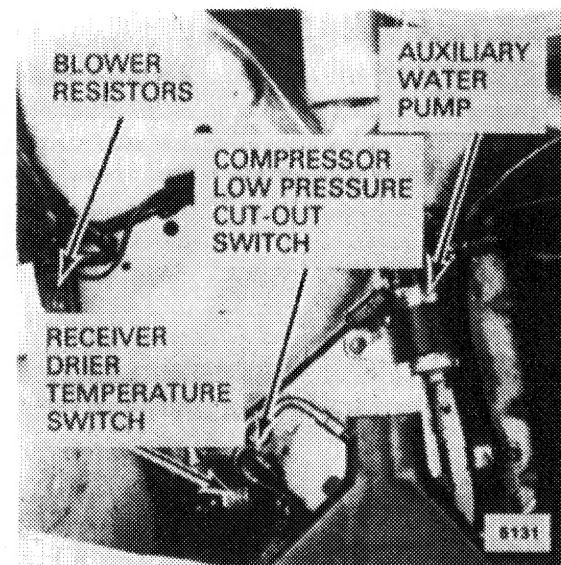


Figure 1 - Behind RH Headlights

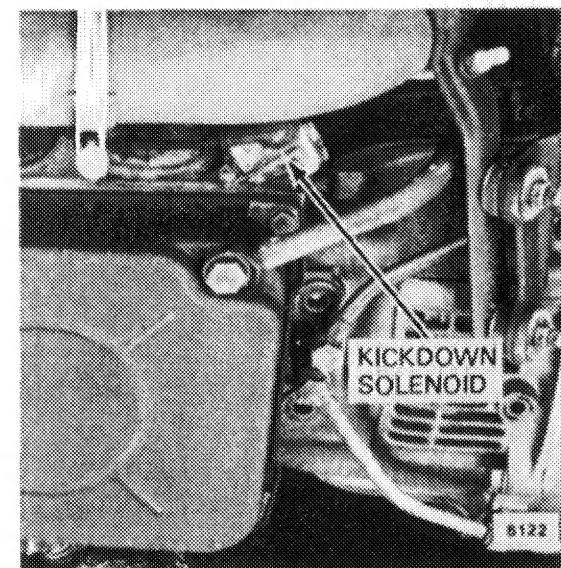


Figure 2 - RH Side of Transmission

COMPONENT LOCATIONS

COURTESY LIGHTS

Page-Figure

Door Switches	In each door jamb	
Front Dome Light and Switch	Above rear view mirror assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Dome Light Switch	On upper console	
Rear Wiper Motor	Lower middle of tailgate	203-1
Tailgate Lock Switch	Inside lower middle area of tailgate	203-1
Warning Module	To right of parking brake support	207-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C136 (8 terminals)	Top center of tailgate frame	208-2
G102	Behind instrument cluster	210-2
G103 (300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

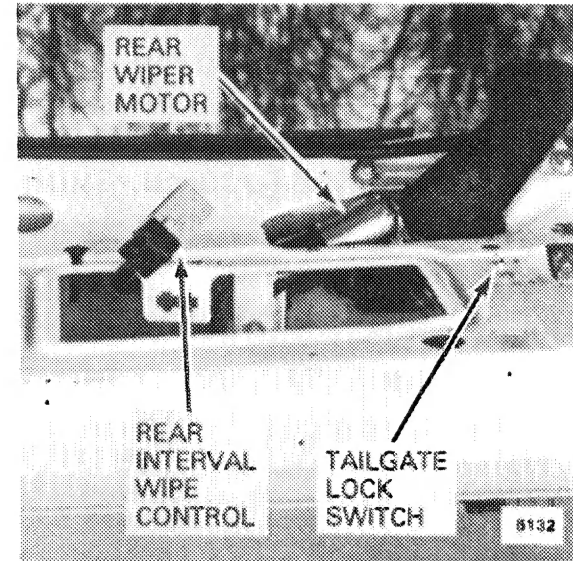


Figure 1 - Below Tailgate Window

HEADLIGHTS/FOG LIGHTS

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C106 (14 pins)	To left of brake pedal support	207-1
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2

HEATED SEATS

Fuse Box	LH rear corner of engine compartment	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	On center console	
G102	Behind instrument cluster	210-2

HORNS/SLIDING ROOF

Fuse Box	LH rear corner of engine compartment	100-1
Horn Switch	In steering wheel	
Sliding Roof Motor	In trunk, above LH rear wheel well	
Sliding Roof Switch	On upper console	
Slip Rings	Behind center of steering wheel	204-2
Washer Motor	At base of washer fluid reservoir	

(continued on next page)

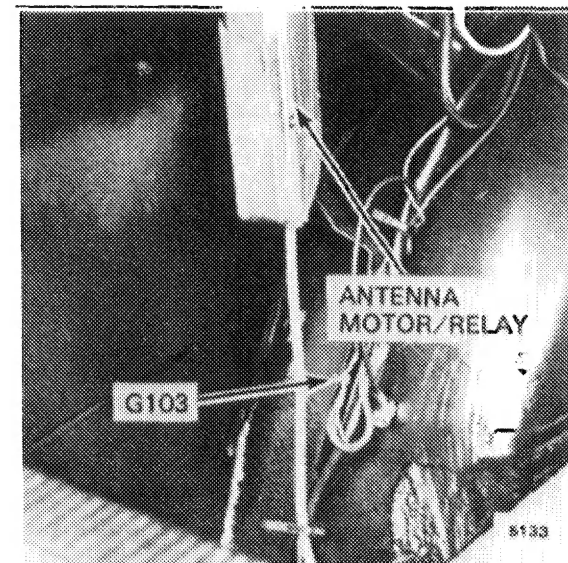


Figure 2 - Behind LH Rear Wheel Well (D/CD only)

COMPONENT LOCATIONS

HORNS/SLIDING ROOF (continued)

C106 (14 pins)	To left of brake pedal support	207-1
C141 (4 pins)	Behind LH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2

LIGHTS: MARKER/LICENSE/TRUNK (300 D/CD)

Fuse Box	LH rear corner of engine compartment	100-1
C104 (14 pins)	Under left side of instrument panel	207-1
G103	In trunk, behind LH wheel well	203-2
G104	Ahead of RH rear light assembly	207-2

LIGHTS: PARK/TAIL (300 D/CD)

Fuse Box	LH rear corner of engine compartment	100-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103	In trunk, behind LH wheel well	203-2
G104	Ahead of RH rear light assembly	207-2

LIGHTS: PARK/TAIL/LICENSE (300 TD)

Fuse Box	LH rear corner of engine compartment	100-1
Rear Wiper Motor	Inside lower middle area of tailgate	203-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C136 (8 terminals)	Top center of tailgate frame	208-2
C138 (4 pins)	To left of spare tire	209-1
C139 (4 pins)	Ahead of RH rear light assembly	207-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

POWER DISTRIBUTION

Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-1
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	Under LH side of instrument panel	207-1
G100	RH front fender, ahead of battery	

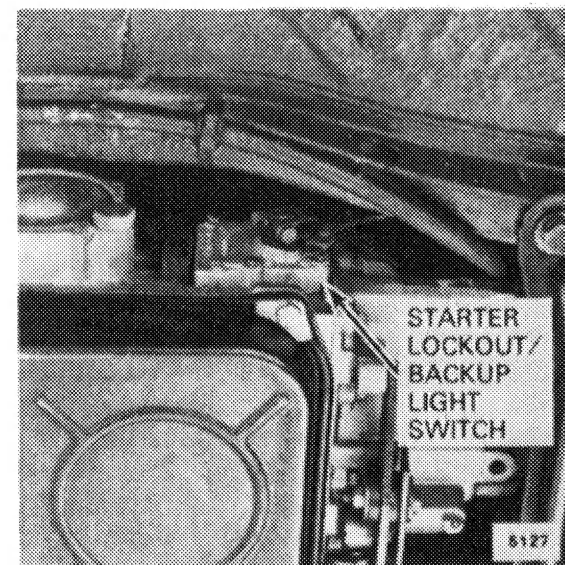


Figure 1 - LH Side of Transmission
(D/CD only)

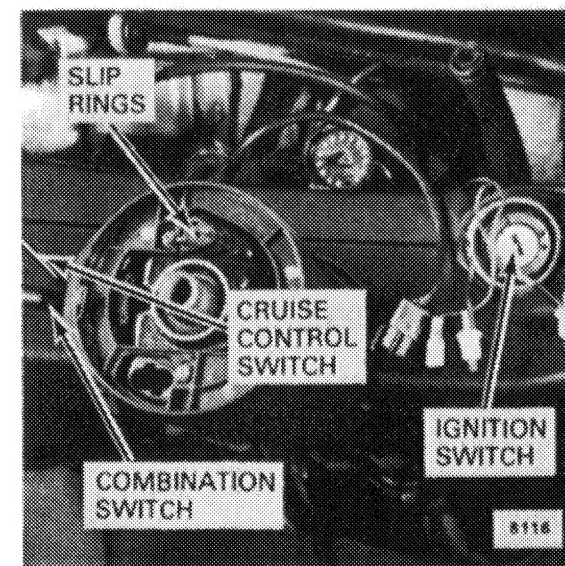


Figure 2 - Steering Column

COMPONENT LOCATIONS

POWER WINDOWS

		Page-Figure
Console Switch Group	On center console	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Window Switches	Below each rear window	
Window Motors	Below each window	209-2
Window Relay	Behind instrument cluster	205-2
C107 (6 pins)	Under console	
C108 (2 pins)	Under console	
G102	Behind instrument cluster	210-2

PRE-GLOW SYSTEM

Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Behind LH headlights	206-2
Ignition Switch	Instrument panel, right of steering column	208-1
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	204-1
Washer Motor	Bottom of washer fluid reservoir	
C130 (6 pins)	Connected to glow plug control relay	
C137 (6 pins)	Connected to glow plug control relay	
C141 (4 pins)	Behind LH headlight assembly	
G100	RH front fender, ahead of battery	
G102	Behind middle of instrument cluster	210-2

REAR DEFOGGER

Fuse Box	LH rear corner of engine compartment	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay ..	Behind LH side of instrument cluster	205-2
C104 (14 pins)	Under LH side of instrument panel	207-1
C136 (8 terminals)	Top center of tailgate frame	208-2
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

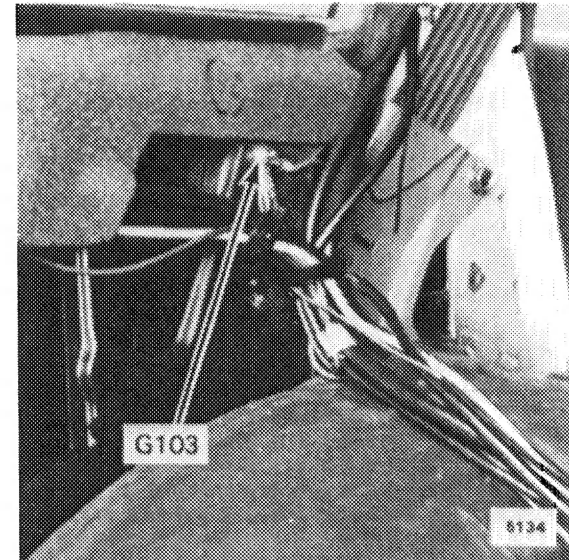


Figure 1 - Above LH Rear Wheel Well
(TD only)

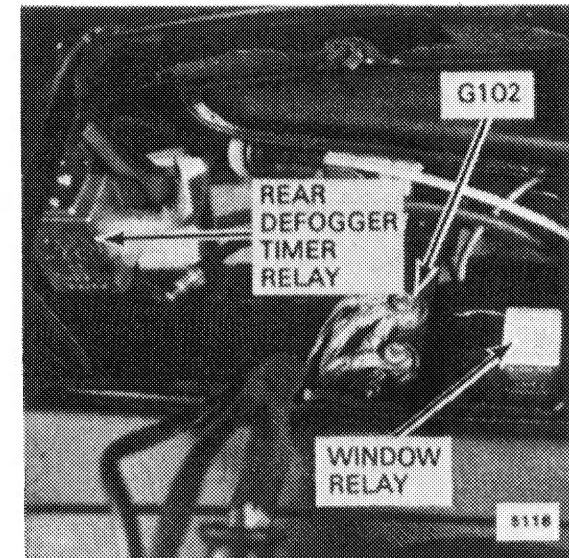


Figure 2 - Behind Instrument Cluster

COMPONENT LOCATIONS

REAR WIPER/WASHER

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Rear Interval Wipe Control	In lower RH side of tailgate	203-1
Rear Washer Motor	Behind fuel tank intake tube	207-2
Rear Washer Switch	On upper console	
Rear Wiper Motor	Inside lower middle of tailgate	203-1
Rear Wiper Switch	On upper console	
C136 (8 terminals)	Top center of tailgate frame	208-2
C139 (4 pins)	Ahead of RH rear light assembly	207-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

SEAT BACKREST LOCKING SYSTEM

Door Switches	In each door jamb	
Fuse Box	LH rear corner of engine compartment	100-1
Switch-Over Valves	Under front seats	
Warning Module	To right of parking brake support	207-1
C160 (1 pin)	In RH door of coupe	
C161 (1 pin)	In RH door of coupe	
G102	Behind instrument cluster	210-2

START/STOP (IGNITION SWITCH)

Fuel Shutoff Diaphragm	Rear of fuel injection pump	206-1
Ignition Switch	Instrument panel, right of steering column	208-1
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	204-1
G100	RH front fender, ahead of battery	
G102	Behind instrument cluster	210-2

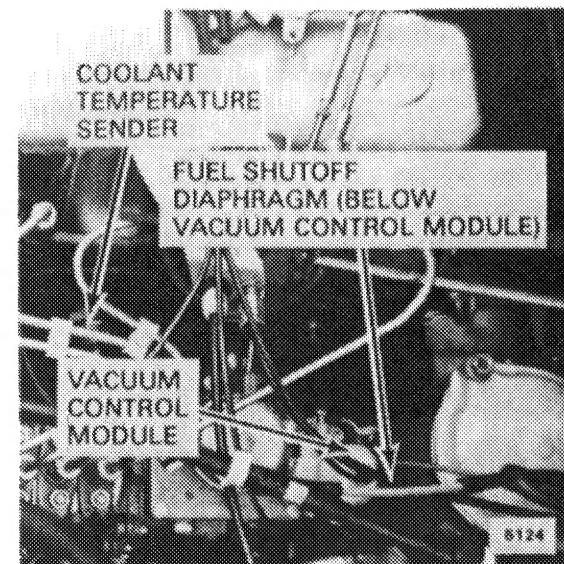


Figure 1 - LH Rear of Engine

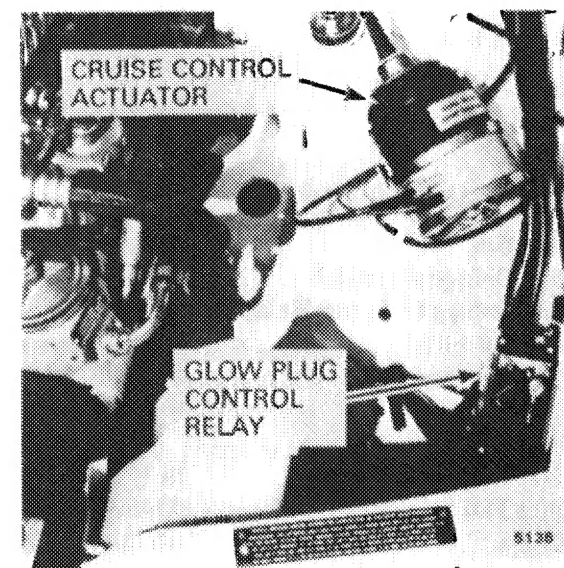


Figure 2 - LH Front Wheel Well (300 D, CD only)

COMPONENT LOCATIONS

STOPLIGHTS/CRUISE CONTROL

Page-Figure

Brake Switch	Top of brake pedal support	
Cruise Control Actuator		
(300 D/CD)	On LH front wheel well	206-2
(300 TD)	LH front of engine	210-5
Cruise Control Amplifier	To right of parking brake support	207-1
Cruise Control Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Vehicle Speed Sensor	Mounted on rear of speedometer	209-5
C104 (14 pins)	Under LH side of instrument panel	207-1
C140 (6 pins)	To left of brake pedal support	207-1
C151 (15 pins, round)	On rear of instrument cluster	209-4
C152 (4 pins, TD only)	On rear of instrument cluster	209-4
C164 (8 pins)	On LH front wheel well	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Warning Switch/		
Flasher	On center console	
C104 (14 pins)	Under LH side of instrument panel	207-1
C106 (14 pins)	To left of brake pedal support	207-1
C138 (4 pins)	To left of spare tire	209-1
C139 (4 pins)	Ahead of RH rear light assembly	207-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1
G104	Ahead of RH rear light assembly	207-2

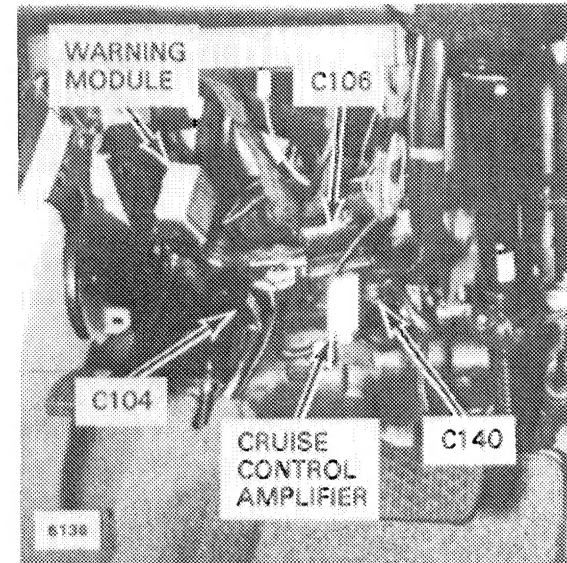


Figure 1 - Above Driver's Footwell

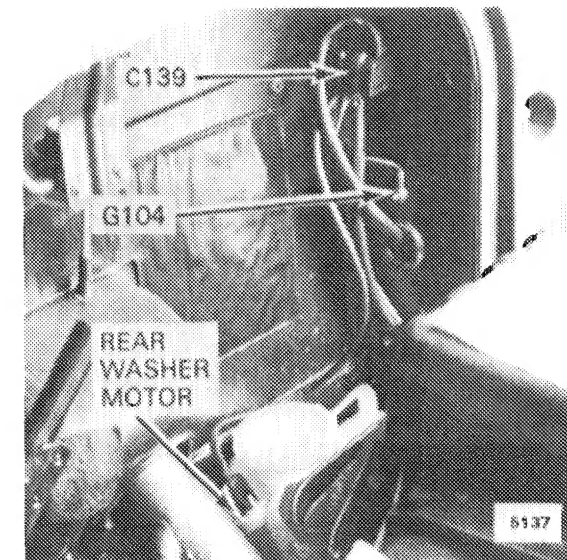


Figure 2 - In Front of RH Rear Lights (TD only)

COMPONENT LOCATIONS

WARNING INDICATORS/GAUGES/CLOCK / INSTRUMENT CLUSTER ILLUMINATION

		Page-Figure
Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	Top LH front part of engine	206-1
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	100-1
Impulse Transmitter		
(TD only)	LH rear of transmission	210-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box ...	201-2
C132 (2 pins)	Behind RH front wheel well, at battery	
C146 (6 pins, TD only)	RH side of driver's footwell	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	210-2
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1

WARNING SYSTEM

Brake Fluid Level		
Switches	Brake fluid reservoir	201-2
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Key Warning Switch	Part of ignition switch	208-1
Parking Brake Switch	On parking brake support	
Warning Module	To right of parking brake support	207-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box ...	201-2
C160 (1 pin)	In RH door of coupe	
C166 (2 pins)	Under driver's seat	
G102	Behind instrument cluster	210-2

WIPER/WASHER

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind LH side of instrument cluster	209-4
Washer Motor	Bottom of washer fluid reservoir	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	207-1
C112 (6 pins)	To upper right of power brake booster	209-6
C141 (4 pins)	Behind LH headlight assembly	
G102	Behind instrument cluster	210-2

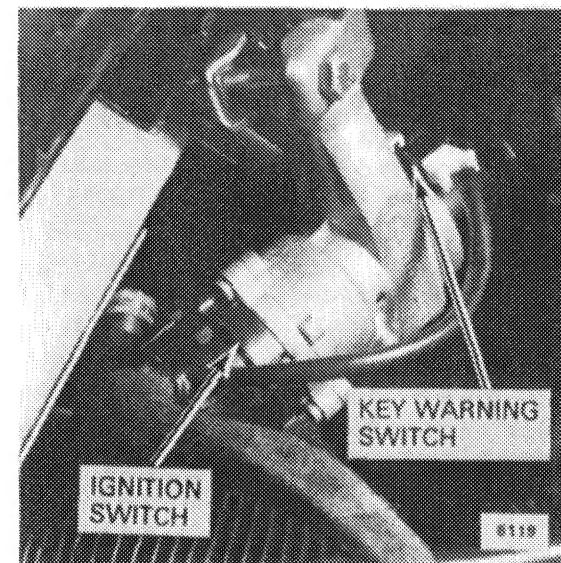


Figure 1 - Ignition Switch (As Seen From Below)

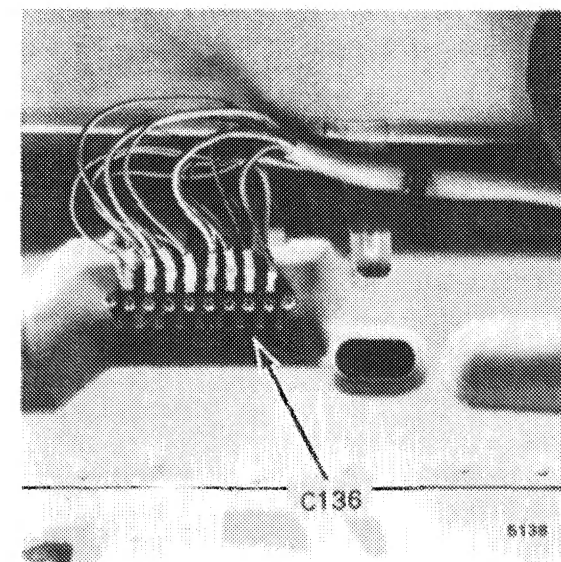


Figure 2 - Top of Tailgate Frame

COMPONENT LOCATIONS

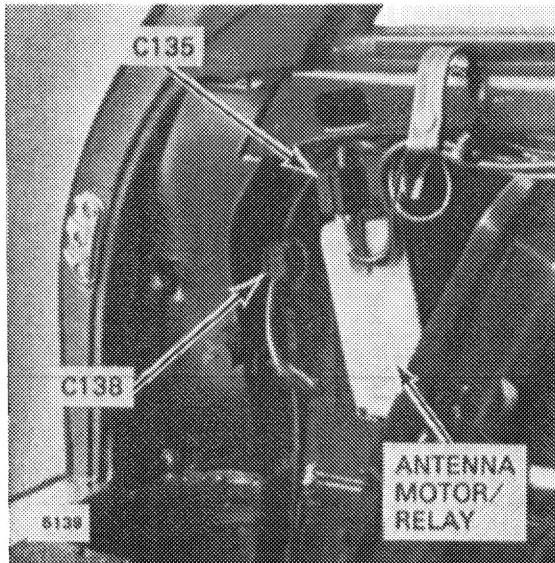


Figure 1 - Spare Tire Well (TD only)

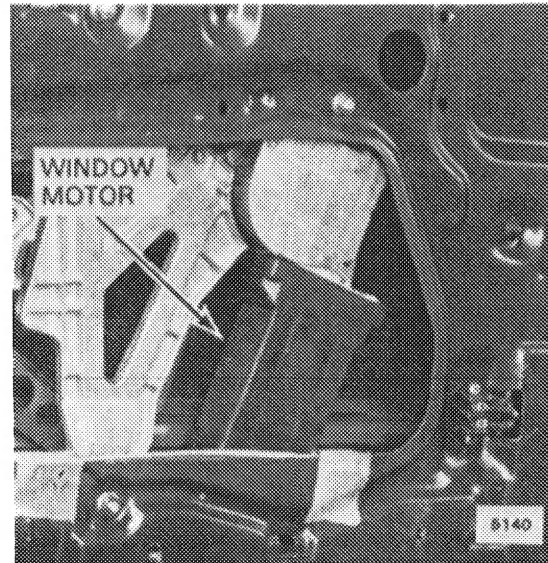


Figure 2 - Inside Driver's Door

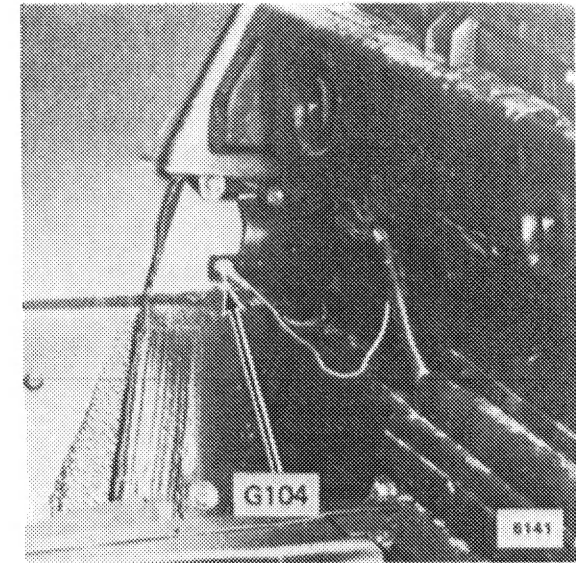


Figure 3 - In Front of RH Rear Lights (D/CD only)

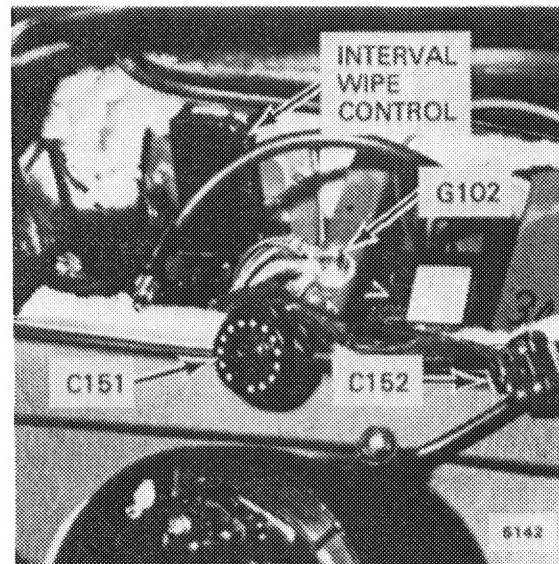


Figure 4 - Behind Instrument Cluster

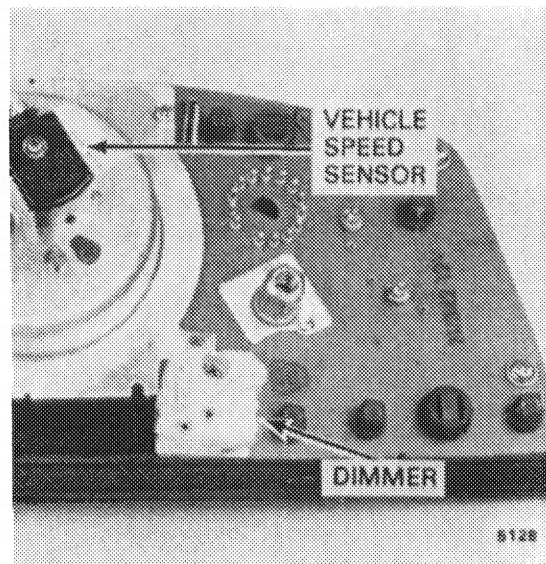


Figure 5 - Back of Instrument Cluster (D/CD only)

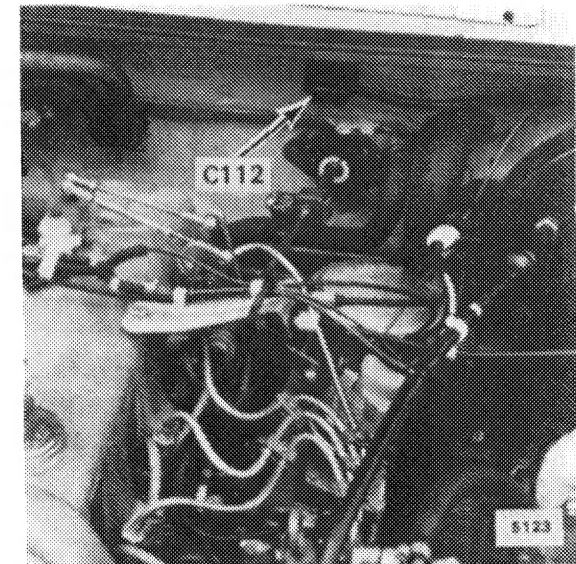


Figure 6 - Right of Power Brake Booster

COMPONENT LOCATIONS

210
300
D/CD/TD

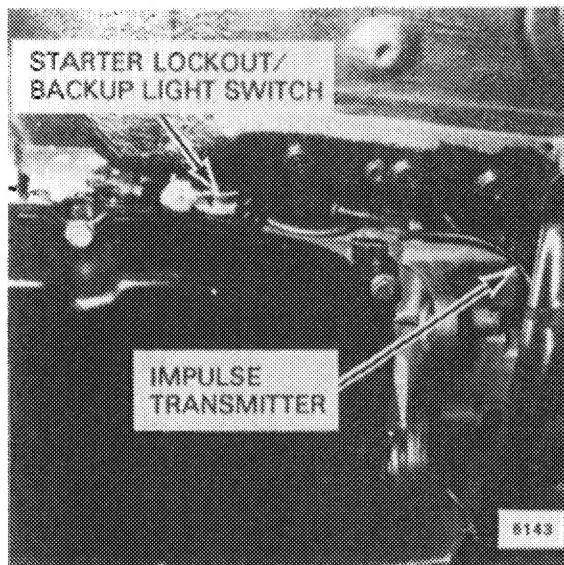


Figure 1 - LH Rear of Transmission (TD only)

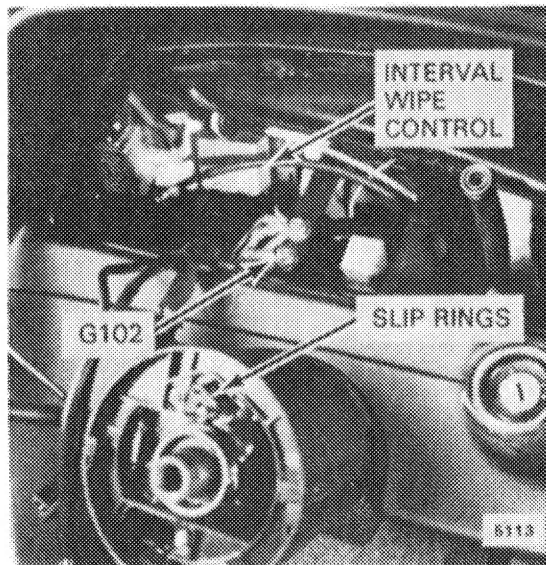


Figure 2 - Behind Instrument Cluster (D/CD only)

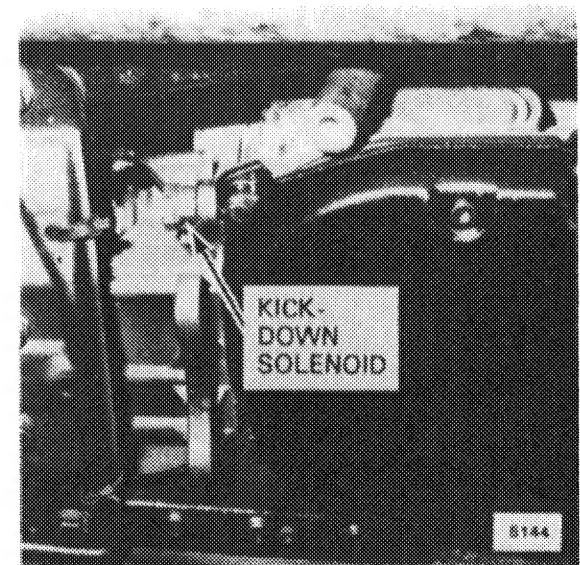


Figure 3 - RH Rear of Transmission (TD only)

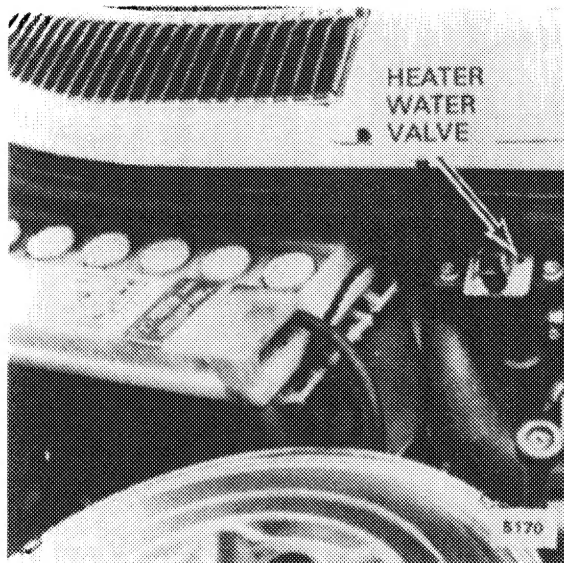


Figure 4 - RH Rear Corner of Engine Compartment

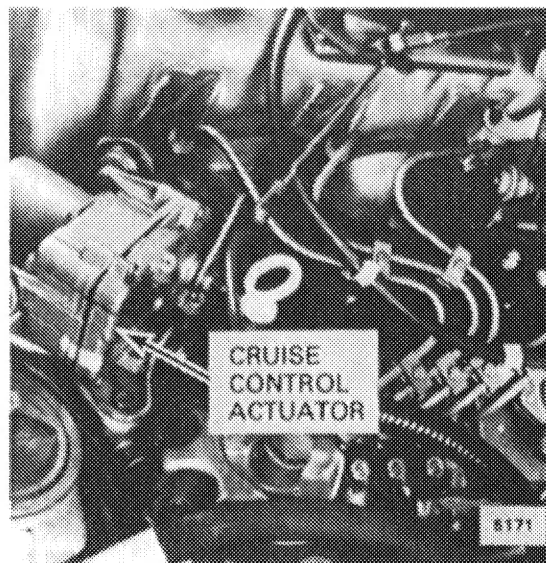


Figure 5 - LH Front of Engine (TD only)